


Component Inspection

Check EMC

1. IG KEY OFF.
2. Disconnect EMC connector.
3. Measure resistance between EMC(+) terminal and EMC(-) terminal of EMC connector .(Components side)

Specification : About 1.6 (at 23°C)

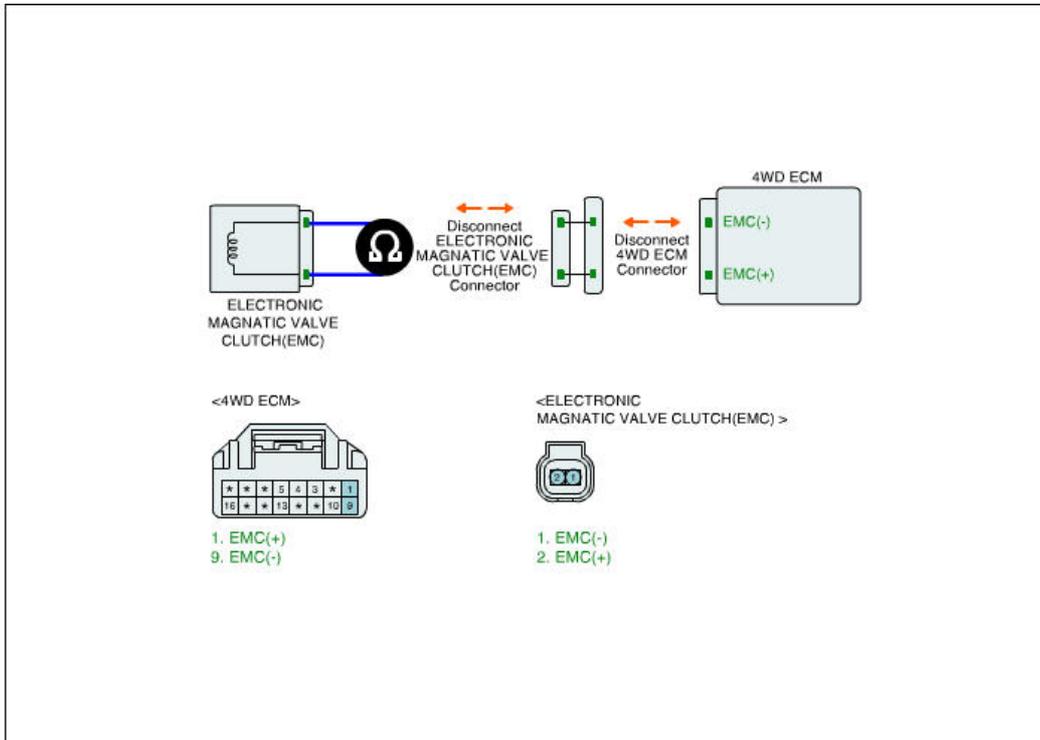

4. Is the measured value within specification ?

YES	Check 4WD ECM connectors for looseness, poor connection, bending, corrosion, contamination, deterioration, or damage. Repair or replace as necessary and then go to "Verification of Vehicle Repair" procedure.
NO	Substitute with a known good EMC and check for proper operation. If the problem is corrected, replace EMC and then go to "Verification of Vehicle Repair" procedure.