

Adjustment

Head Lamp Aiming Instructions


The head lamps should be aimed with the proper beam-setting equipment, and in accordance with the equipment manufacturer's instructions.

If there are any regulations pertinent to the aiming of head lamps in the area where the vehicle is to be used, adjust so as to meet those requirements.

Alternately turn the adjusting gear to adjust the head lamp aiming. If beam-setting equipment is not available, proceed as follows :

1. Inflate the tires to the specified pressure and remove any loads from the vehicle except the driver, spare tire, and tools.
2. The vehicle should be placed on a flat floor.
3. Draw vertical lines (Vertical lines passing through respective head lamp centers) and a horizontal line (Horizontal line passing through center of head lamps) on the screen.
4. With the head lamp and battery in normal condition, aim the head lamps so the brightest portion falls on the vertical lines.

Make vertical (A) and horizontal (B) adjustments to the lower beam using the adjusting wheel.

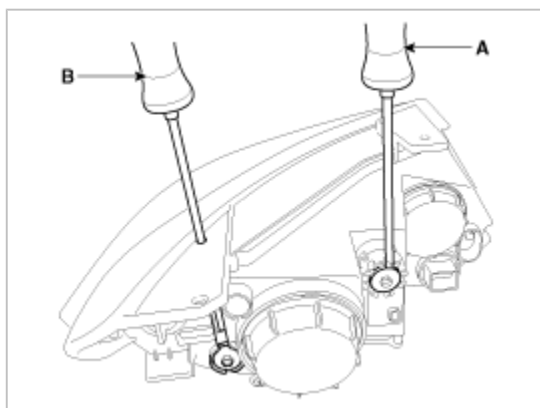


Front Fog Lamp Aiming


The front fog lamps should be aimed in the same manner as the head lamps aiming.

With the front fog lamps and battery in normal condition, aim the front fog lamps by turning the adjusting gear (A).

- When aiming the front fog lamp, the fog lamp can be adjusted in front of vehicle without removing the front bumper.
- The adjusting gear is located inside the radiator grill.

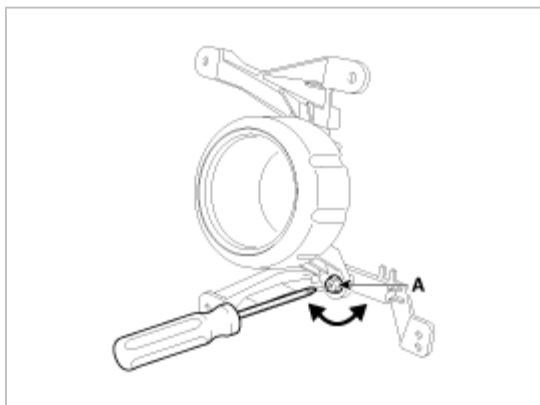

Head Lamp And Fog Lamp Aiming Point

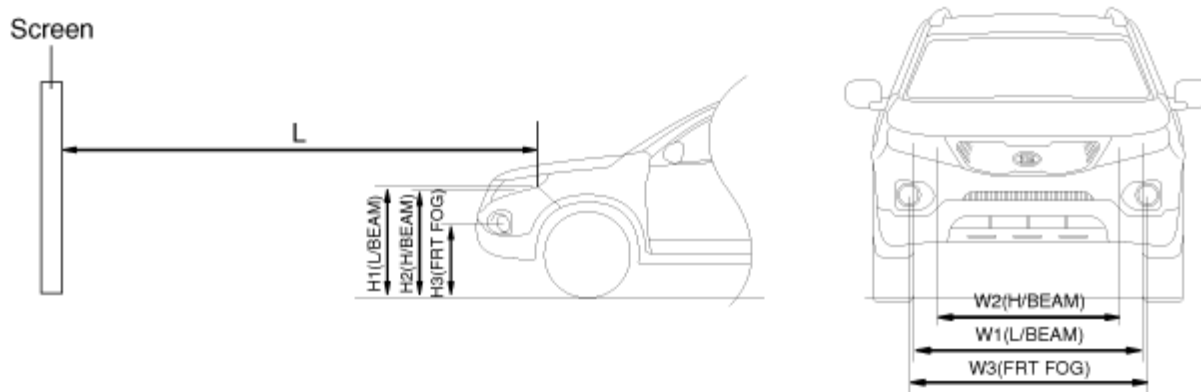

H1 : Height between the head lamp bulb center and ground (Low beam)
 H2 : Height between the head lamp bulb center and ground (High beam)
 H3 : Height between the fog lamp bulb center and ground
 W1 : Distance between the two head lamp bulbs centers (Low beam)
 W2 : Distance between the two head lamp bulbs centers (High beam)
 W3 : Distance between the two fog lamp bulbs centers
 L : Distance between the head lamp bulb center and screen

Unit : in (mm)

Vehicle condition	H1	H2	H3	W1	W2	W3	L
Without driver	36.4(927)	35.4(901)	24.0(611)	53.7(1,366)	43.2(1,098)	56.2(1,428)	118(3,000)
With driver	36.2(920)	35.2(895)	23.7(604)				


1. Turn the low beam on with driver seated in the vehicle.

The cut-off line should be projected in the allowable range shown in the picture.

In case of equipping with the manual leveling device, set the leveling device switch on the "O" position.

In case of equipping with the auto leveling device, set the initialization by using the diagnostic tool before aiming.


[LHD]

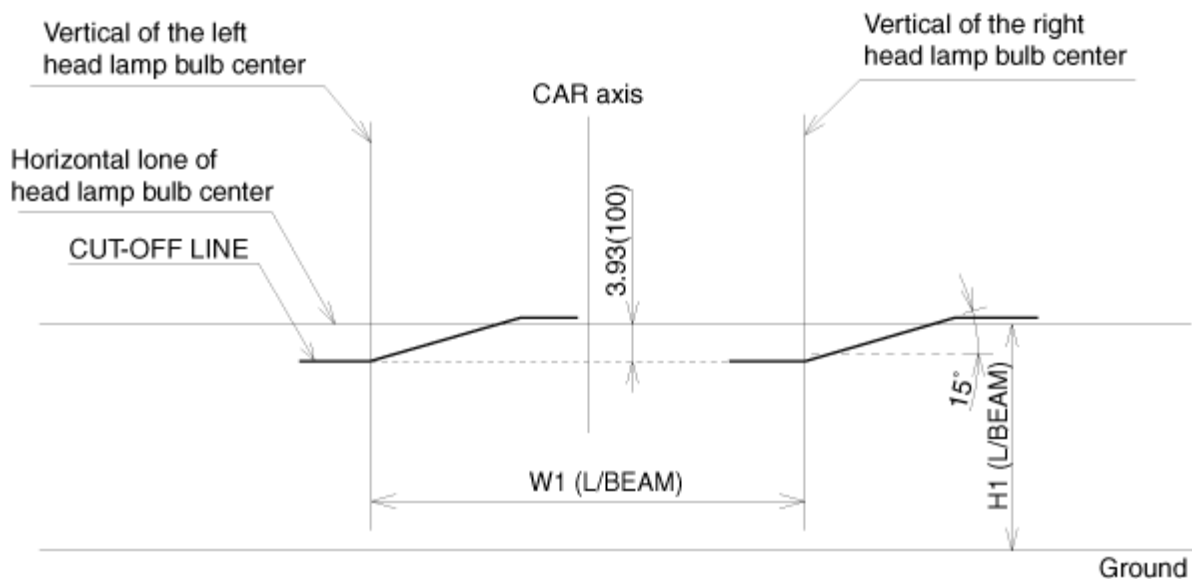

L : 393 in (1000mm)

Unit : in.(mm)

[RHD]

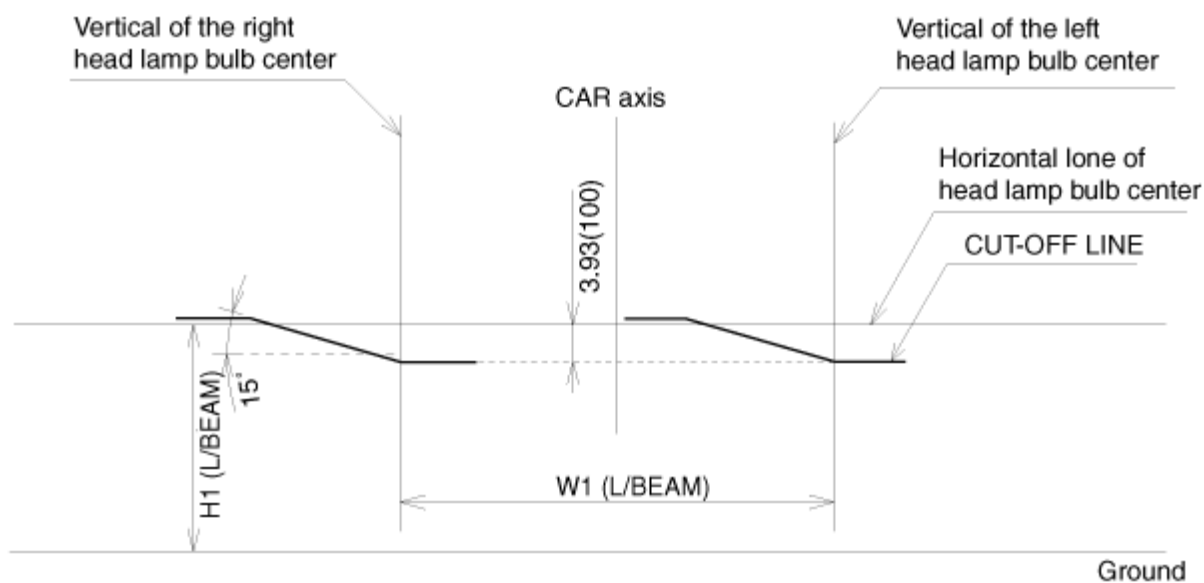


L : 393 in (1000mm)

Unit : in.(mm)

2. Turn the high beam on with driver seated in the vehicle.

The hot zone should be projected in the allowable range shown in the picture.

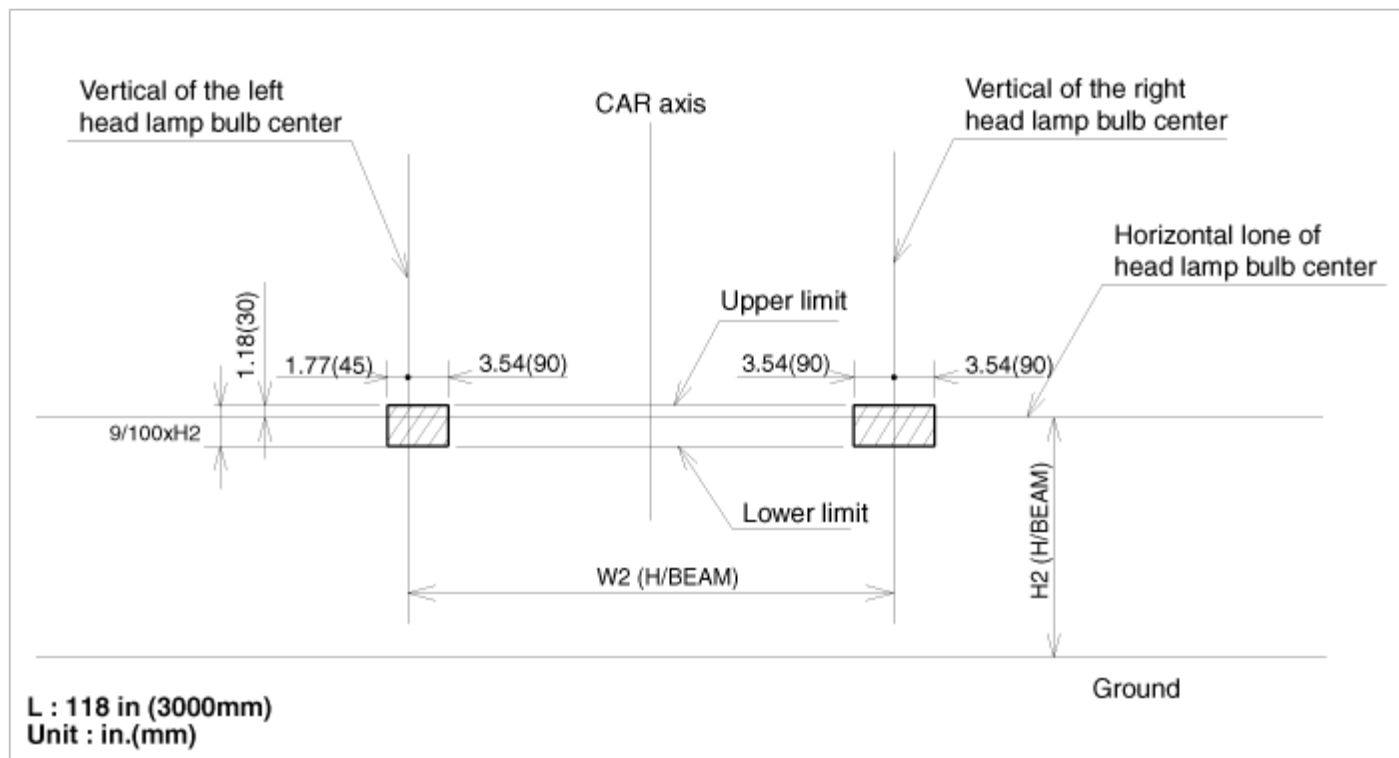

3. Turn the front fog lamp on with driver seated in the vehicle.

The cut-off line should be projected in the allowable range shown in the picture.

