




### Component Inspection

1. IG KEY "OFF", ENGINE "OFF".
2. Disconnect Fuel pressure regulator valve connector.
3. Check FPRV component resistance.
  - 1) Specification :  $2.9 \sim 3.15\Omega$  (20°C)

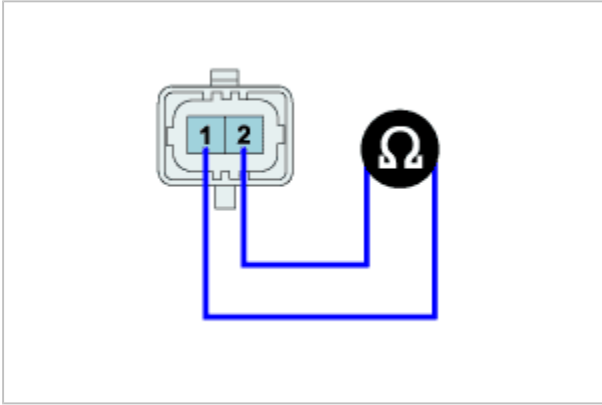

4. Is FPRV component resistance within the specification?

☐ YES

a. Go to "Verification of Vehicle Repair".

☐ NO

a. Replace High pressure pump ass'y and go to "Verification of Vehicle Repair".